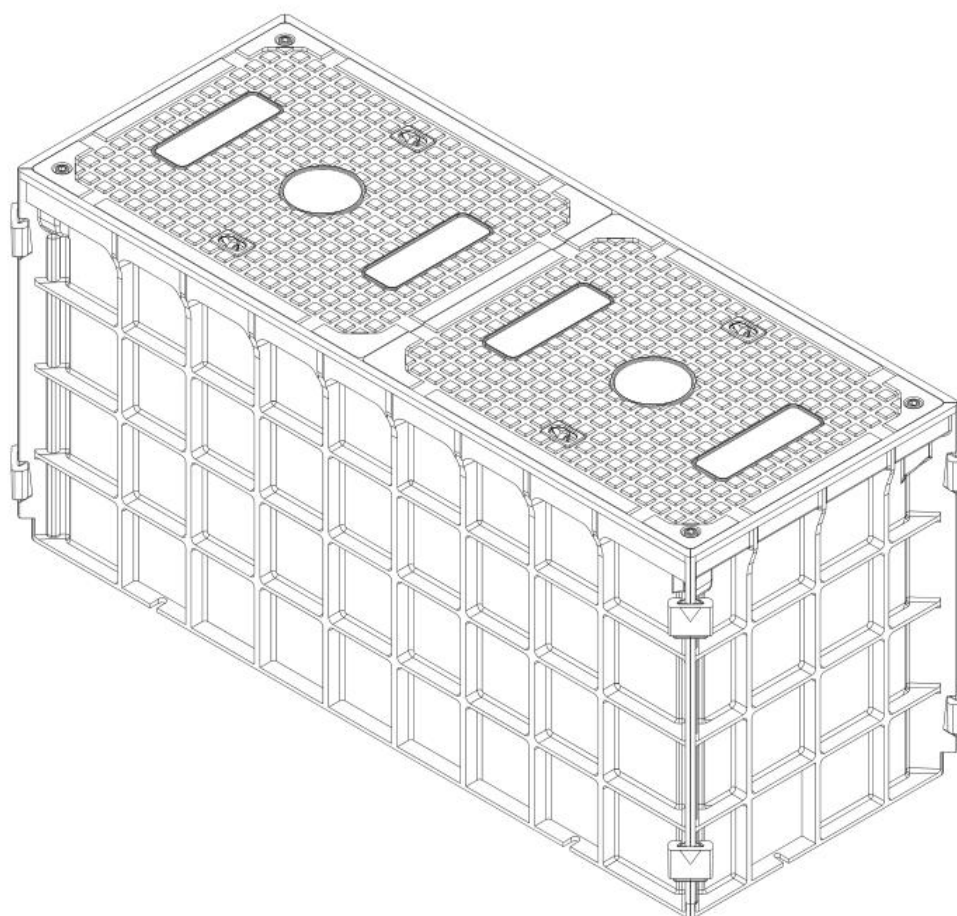
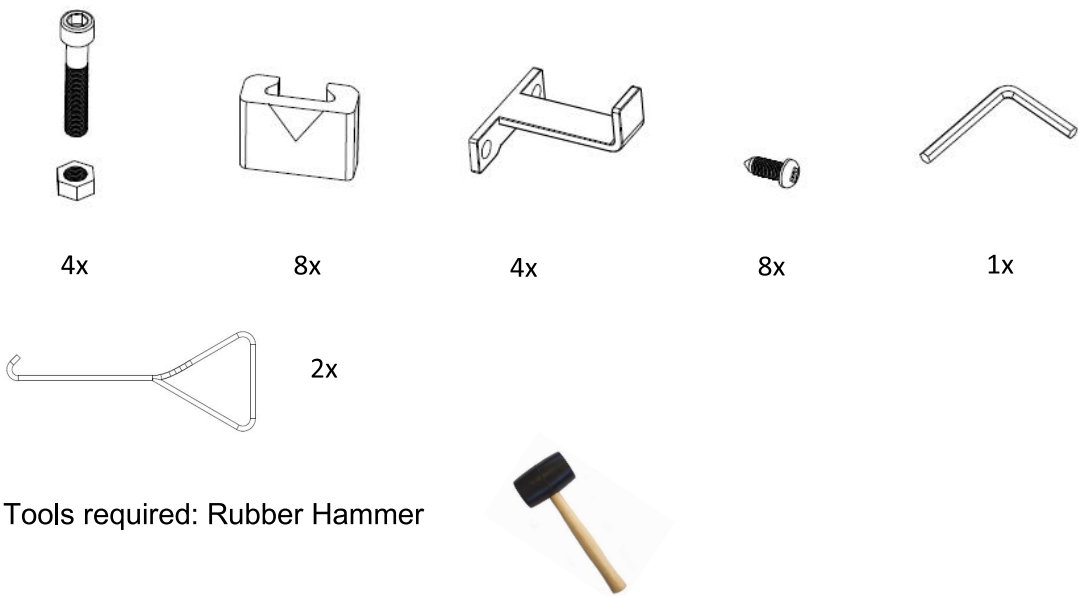




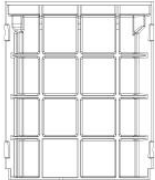
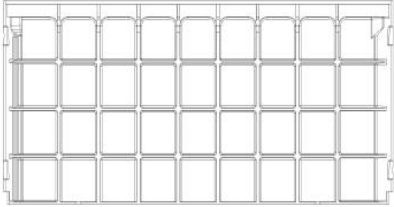
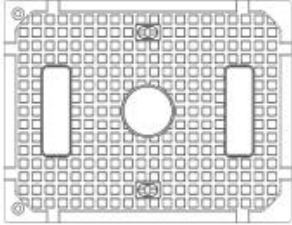
Assemble Kit Content



Installation

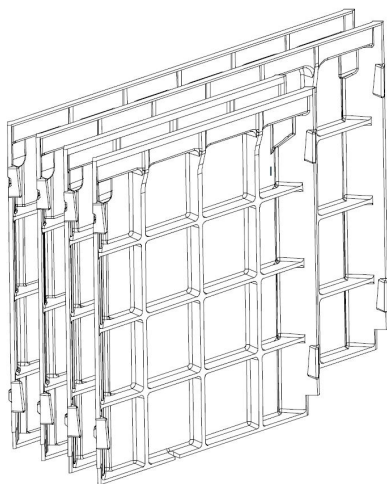
Prepare and check the parts

GW38

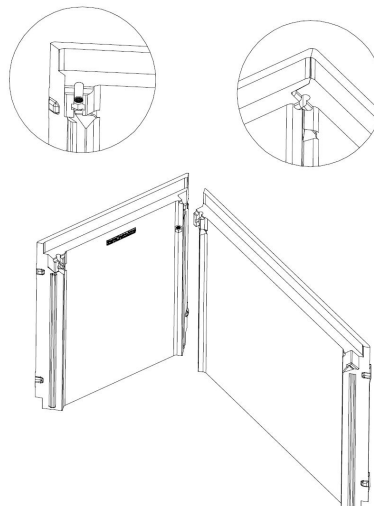
Parts P/N & Description		
GWP36	GWP56	GWC38
Side Wall- Short wall for GW38	Side Wall- Long wall for GW38	Lid-Cover for G\
		

Step 1

Prepare 2 x GWP36 and 2 x GWP56
standing on the ground

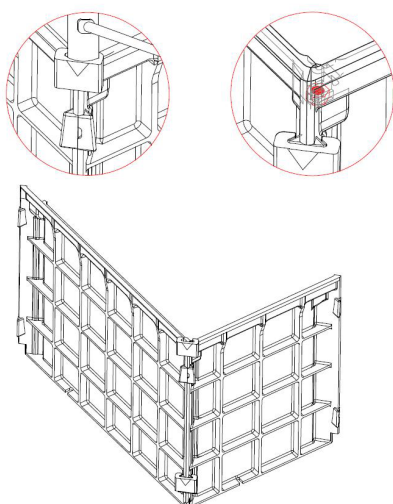
**Step 2**

Bury nut between GWP36 & GWP56
Assemble angle should be 90 degree.

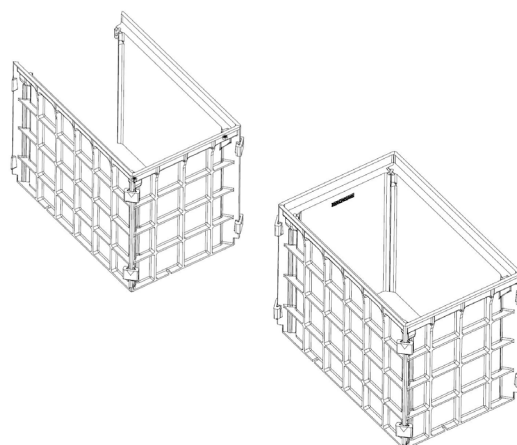
**Step 3**

Clamp GWP36 & GWP56 with 2
Clips.

Knock clip with rubber hammer till flat

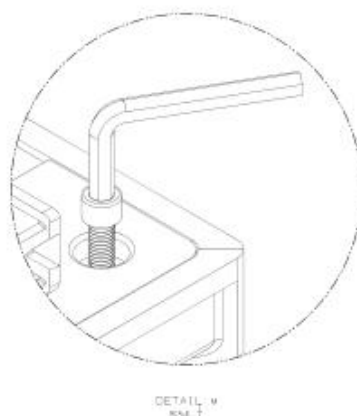
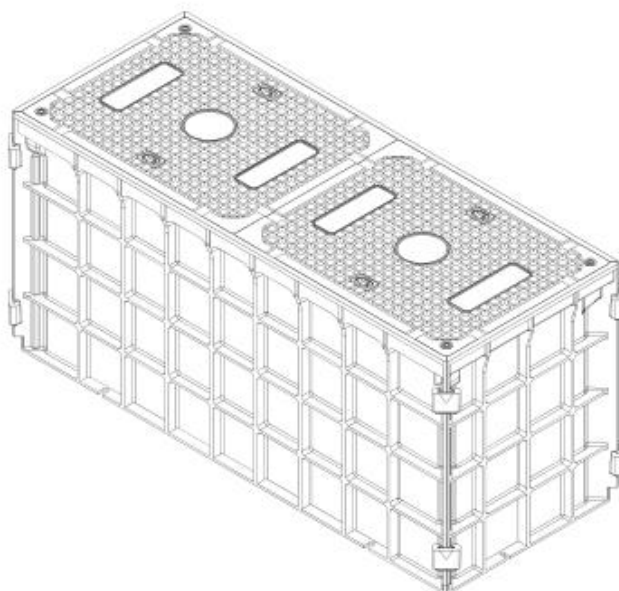
**Step 4**

Repeat Step 2&3, until set a box



Step 5

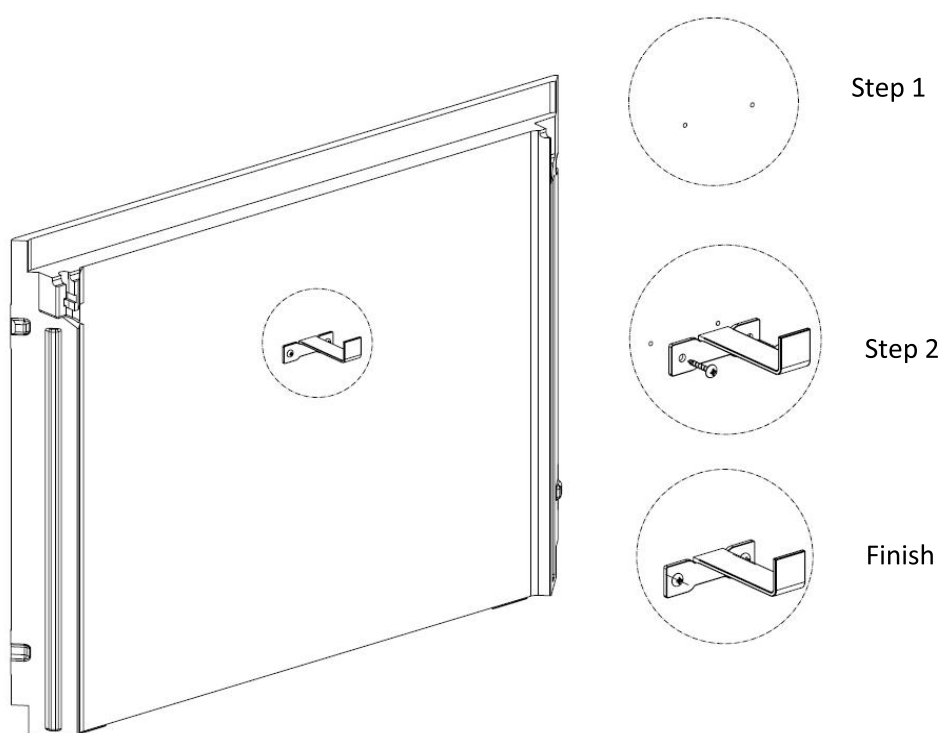
Use the hook tool and lift the cover GWC38 on top of the box just assembled, fasten screws on lid with Screwdriver



AccessoriesHow to Mount FOSC Bracket inside of the vault**Step 1**

Locate a place where FOSC bracket installed, drill 2 holes of bracket holes.

Drilled holes

**Step 2**

Use screwdriver, fasten bracket onto wall with self-tapping screws.

Appendix

Part List Part Number for GW38

Item	P/N	QTY/Vault	Description
Clip	CL652	8	Connect GWP walls
Socket Head Screw	SHSM1270	4	Fasten lid onto walls
Nut	NUTM12	4	Buried into GWP, work with screw
Screw Driver	SDM12	1	Fasten and unfasten the screw
J-Bracket	BKT822	4	Holding FOSC or loop cable
Self-tapping Screw	STSM419	8	Fasten J-Bracket onto walls
Hook	HK30	2	Per 2 vault equip 1 pair of hook